 
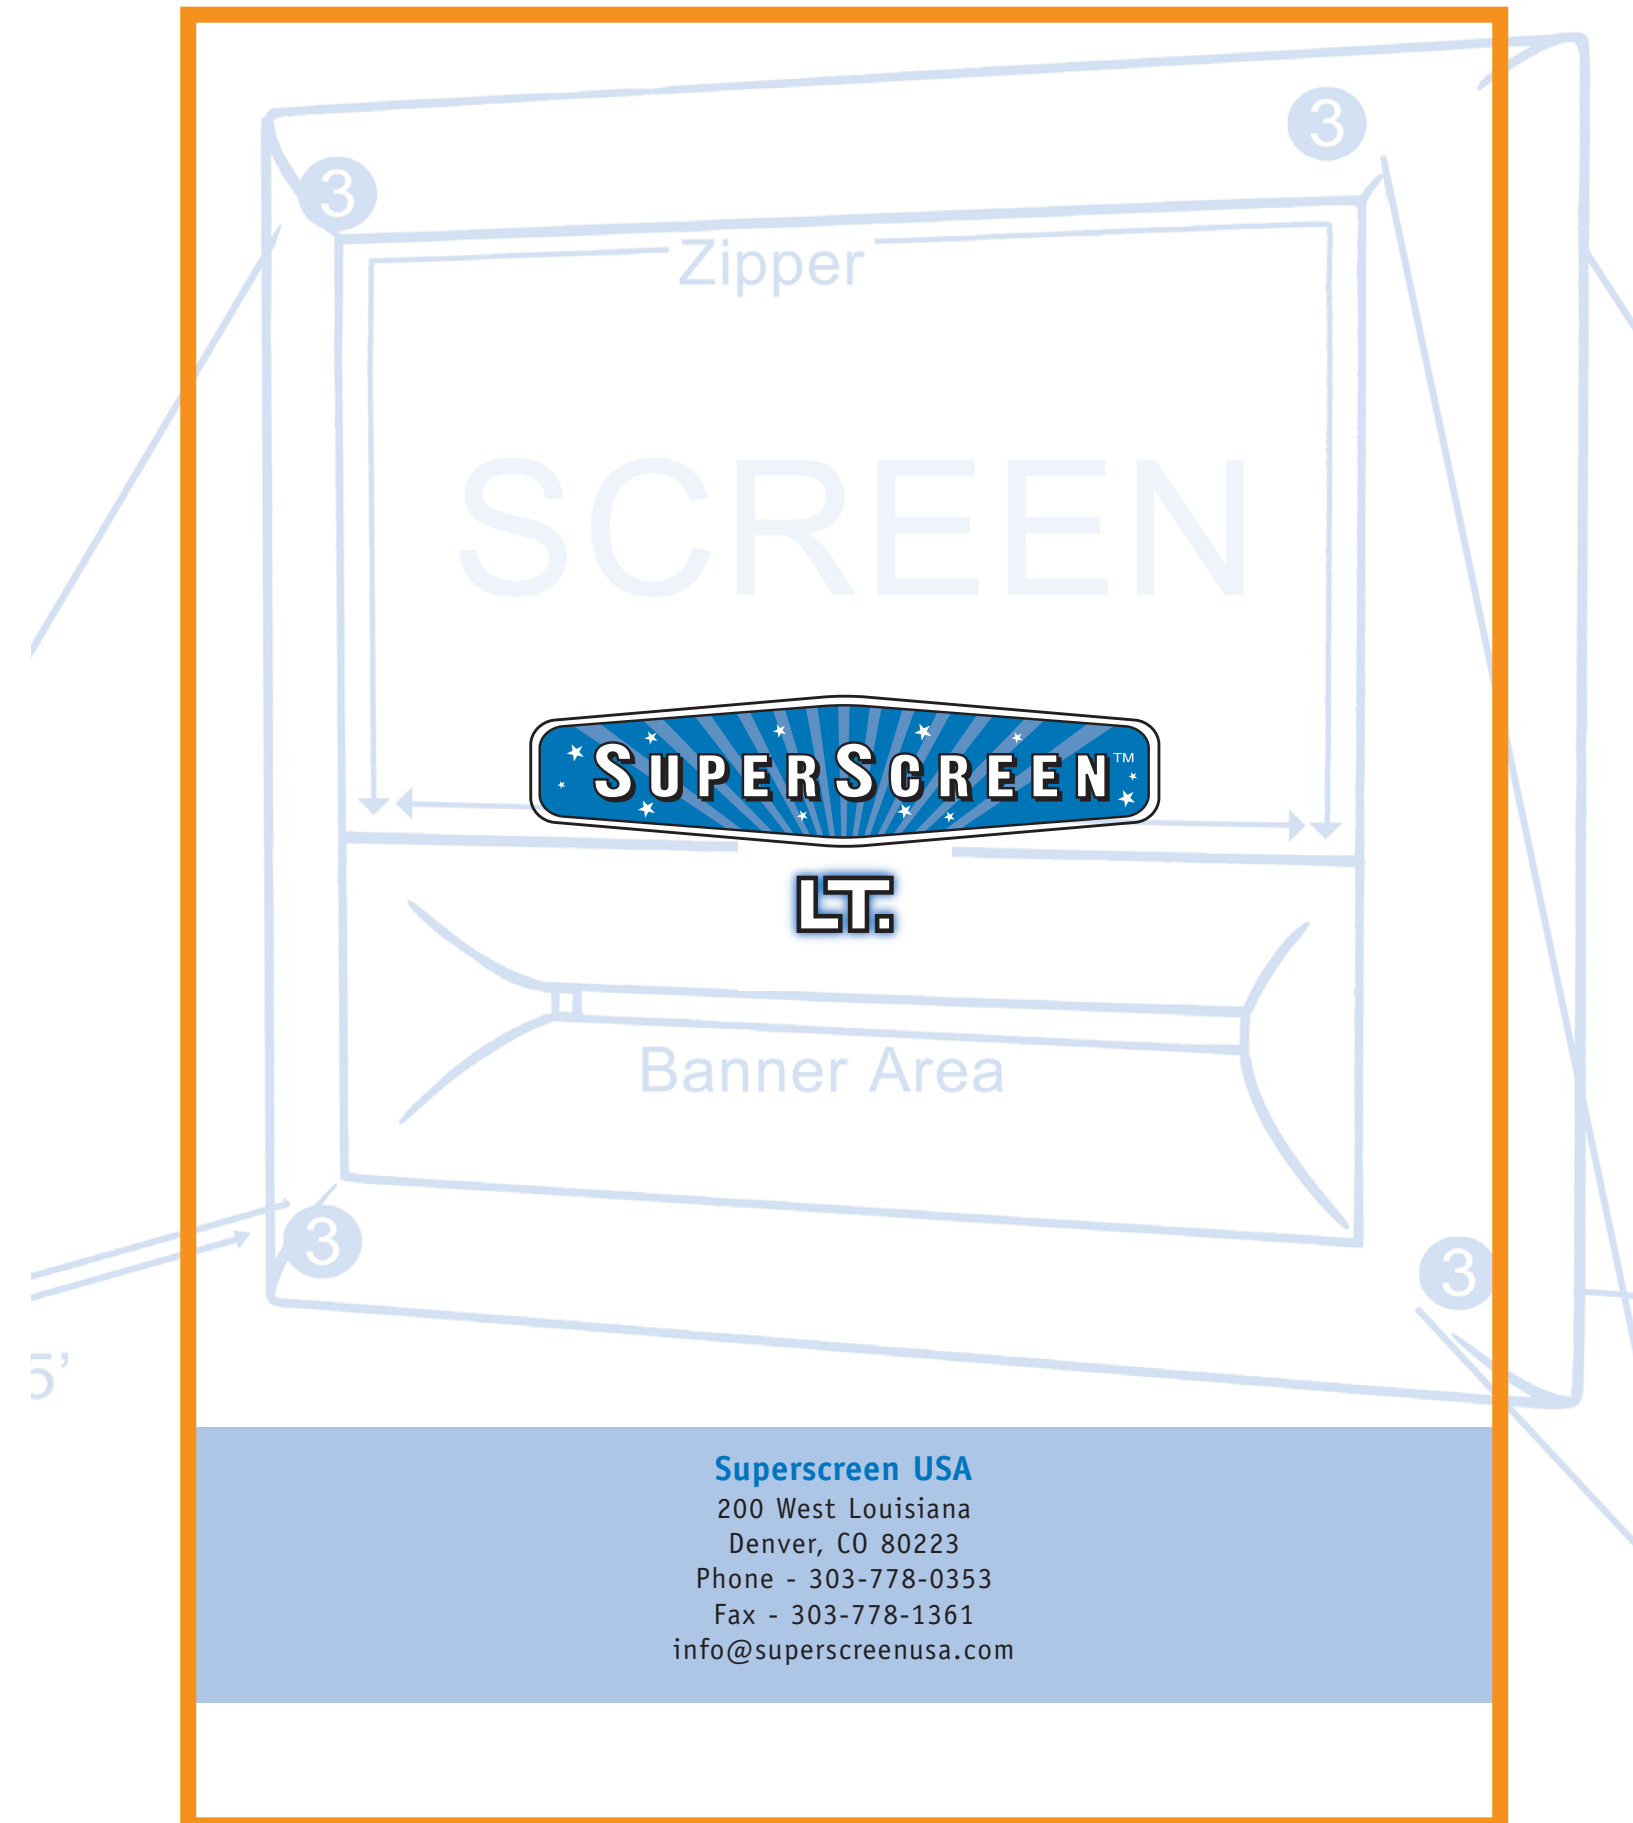 


## A/V SET-UP FOR SUPERSCREEN™ (CONTINUED)

8. Push play on the DVD player. If no picture is on the screen, depress the "Monitor button." Follow the DVD instruction for playback options.
9. You also have the option of hooking up other playback devices, computers, video games and such. Again, read all about that. It is very simple.
10. Turn on the projector by depressing the "On/Stand-by" button for a minimum of two seconds. Again, please follow the instruction manual provided with the projector to learn more about its functions.
11. Set the input of the projector to "S-Video" by pressing the "MENU" button on the projector and selecting "S-Video" under the Input Select sub-menu to project the DVD. (You can also press the "S-Video" button on the projector remote).
12. Adjust the tilt of the projector by using the front Tilt Feet, along with the two adjustable legs on the back. Adjust the picture using the Zoom lever and Focus ring on the lens. You can also set the Keystone correction by following the instruction manual on "Keystone Adjustment"
13. Set correct audio levels on the Peavey audio system by raising the "Master" and channel fader below the audio "Aux in" input. You may need to adjust the volume control on the DVD player. It should be at least 75% to get good volume. A microphone is included to make announcements before you event. Plug it into channel number 1.

 
Sit back and enjoy your movie experience.

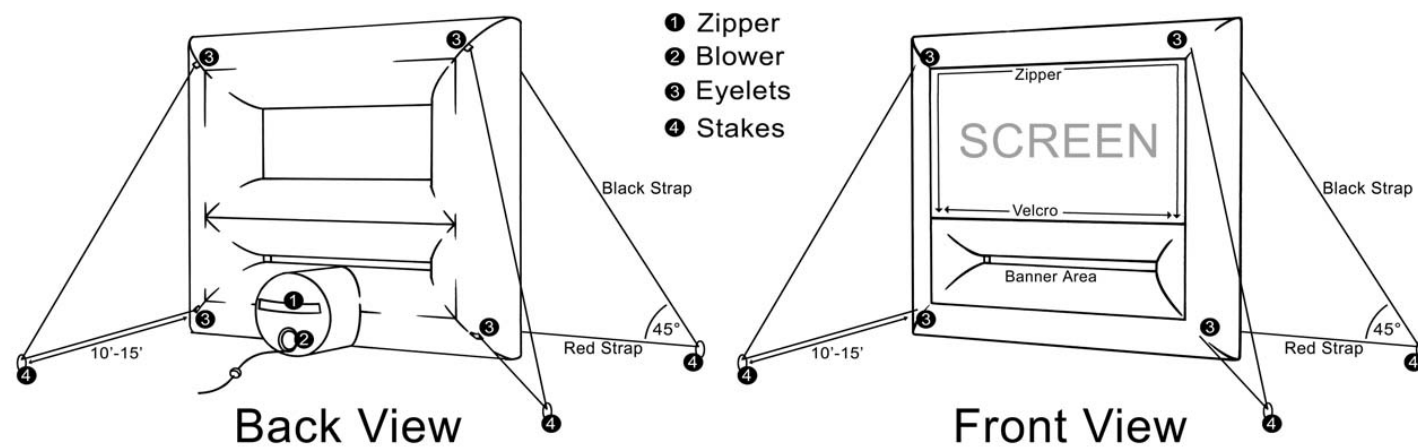


## INSTRUCTIONS AND CARE SUPERSCREEN™

See Warning and Precautions for SuperScreen™ at the Bottom of this Page

1. Unpack the screen and tarp.
2. Unroll the SuperScreen™ onto the tarp. The screen surface (as well as front Velcro strips) should be face-up; the bottom of the unit should face the audience.
3. Attach the blower: Locate the zipper on the back tube and place the blower inside. Zipper the blower inside and let the electric plug hang-out.
4. Attach the screen using the zippers on all three sides. (If you are using the inflatable unit as a billboard this is the best time to attach any front banners to the Velcro around the base.)

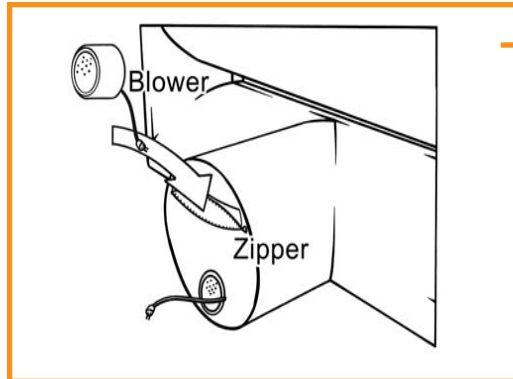

 5. At 10 – 15 feet from each corner, screw auger stakes into the ground at a 45 degree angle. Just remember to “Think before you dig!”
6. To install straps: Take the nylon black straps and loop them through to “choke” each eyelet (The LT Only: the bottom straps are red).
7. Plug in the blower and fully inflate the SuperScreen™. Stand SuperScreen™ into place and use the straps and auger stakes to secure the unit. Please note: Additional Velcro is provided on the bottom of the screen to alleviate excess wrinkles; pull the screen down to the large Velcro strip and make tighter.

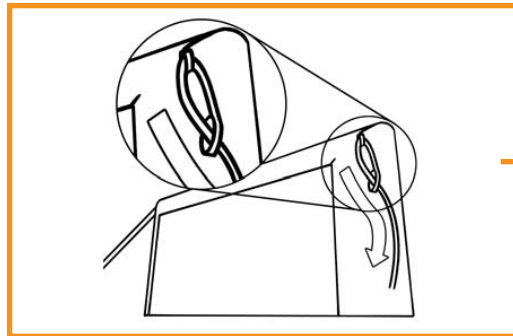

8. Secure all straps snug into the auger stakes. The eyelet will pull slightly-away from the unit which is a good sign that it is tight and secure.
9. To deflate: Turn off blower. Lay the inflatable on the ground with the screen surface facing up. With the screen inside you may choose to remove the screen or leave the screen in tact. Fold screen similar to a bed sheet. Remove blower and push out excess air. Roll inflatable (much like a sleeping bag) and pack up gear.



## SAFETY, WEATHER, CLEANING AND BLOWER MAINTENANCE:

- Always survey the ground before staking the equipment. Electrical hazards may exist underground. Overhead power lines may exist; always look-up and survey the electrical hazards above. Check for tree branches or anything that will interfere with SuperScreen™ inflation. Cover all sharp edges and protuberances that could damage the inflatable during inflation or deflation.
- Never use sand bags or weights. Use only substantial auger stakes provided, trees, poles, or firmly secured obstacles.
- Do not use SuperScreen™ above ground level or on a roof.
- Keep away from water. Do not place or store where this unit can fall or be pulled by water. Never touch the unit if water is on or near the inflatable. Keep all electrical parts and extension cords dry. Always unplug first from the electrical outlet.
- Make sure electrical connection points are above water level to prevent shorting out the electrical system.
- SuperScreen™ LT can withstand moderate wind and weather. Winds of up to and over 15 mph will create issues for your movie presentation. If it is excessively windy it is best to deflate.
- The best way to keep the inflatable clean is to always use the tarp and wash with a brush and water when dirty. Do not use harsh chemicals, lacquer thinner or other strong solvents which may deteriorate the fabric. Always allow for the inflatable to dry before packing.
- To maintain the blower, add oil as needed. Use SAE-20 non-detergent oil. Clean the blower occasionally using an air compressor. Never drop or crush blower. It is very delicate.
- Use the repair fabric supplied for minor repairs. Apply small patches using vinyl cement. Repairs can be done by any business that uses industrial sewing machines OR at SuperScreen™. Please obtain a warranty claim form before returning the unit for repairs or making repairs on your own.

## A/V SET-UP FOR SUPERSCREEN™

1. Unpack the projector, DVD and audio system and read the entire manual prior to your first event.
2. Set the projector approximately 17 – 20 feet from the screen. Note: None of the A/V cables provided with the projector will be needed to show a DVD movie. The cables provided with the DVD player are recommended including the S-Video cord and audio cord. Use the VGA cable included with the projector when using a computer.
3. Attach power cord to projector, audio system and DVD and plug into provided power strip.
4. Place the DVD player on the audio system and install a DVD disk.
5. Plug the miniature end of the supplied Composite/S-Video cable (In DVD box) into the VIDEO input of the DVD player and then plug the black S-Video (4 pin) connector into the back of the projector labeled S-VIDEO IN.
6. Plug the miniature end of the stereo audio cable into the DVD player input labeled AUDIO IN/OUT, then plug the red and white audio cables into the “AUX IN” jacks of the Peavey audio system. Note that the Peavey system has Aux in and out. Make sure you use the “Aux in” input.
7. Set up the speaker stands to the desired height and place the speakers onto the stands. Follow the directions provided in that manual. They should be left and right of the screen for best performance. Plug the provided speaker cables (Red ends) into the rear of the audio system jacks labeled “LEFT/RIGHT OUTPUT.” Plug the other end of the speaker cables into the jacks on the front of the speakers.